

DRYER - Fisher & Paykel AD39

Important Safety Instructions

Dryer Use



WARNING!

To avoid a fire hazard, including spontaneous combustion:

- The tumble dryer is intended only for drying textile material washed in water.
- Undergarments that contain metal reinforcements should not be placed in the dryer. Damage to the dryer can result if the metal reinforcements come loose during drying. If you wish to dry these items use a drying rack.
- **Never dry rubber articles, fibreglass, or any plastic items or film** e.g. plastic lined tablecloths and baby bibs.
- **Clothes should go through the cool down/airing phase of the cycle. If for any reason the dryer is stopped before the cycle has finished, dry clothes should be removed immediately and not left in the dryer.**
Clothes should be spread out to cool and not left bunched up e.g. in a clothes basket.
- This dryer has been designed for domestic use only, **not** for commercial applications where there may be increased lint accumulation or flammable materials in the atmosphere or load.
- This dryer is **not** intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure they do not play with the dryer.



CAUTION!

If you are using an extension cord or a portable electrical outlet device (e.g. multi-socket outlet box), ensure that it is positioned so that it does not come into contact with water or moisture.

Lint

Accumulated lint in the dryer can become a fire hazard, it also reduces the efficiency of the dryer by causing longer drying times and increased power consumption.

- Clean the lint filter before every load.
- Ensure the area around the dryer is clear of lint.
- At regular intervals have the interior of the dryer cleaned of any accumulated lint. This must be done by a qualified person for electrical safety.
- If you change the mounting of the dryer from upright to inverted or vice versa, the dryer must be cleaned internally by a serviceman.



Important Safety Instructions



Spontaneous Combustion



WARNING!

To reduce the risk of fire in a tumble dryer the following should be observed:

- Items that have been spotted or soaked with vegetable oil or cooking oil are a fire hazard and should not be placed in a tumble dryer.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as a tumble dryer.

The items become warm causing an oxidation reaction in the oil. This oxidation creates heat. If the heat cannot escape the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping creating a fire hazard.
- If it is unavoidable that fabrics that contain vegetable oil, cooking oil or have been contaminated by hair care products be placed in a tumble dryer, they should first be washed in hot water with extra detergent – this will reduce, but not eliminate the fire hazard. The cool down cycle of the dryer should be used to reduce the temperature of these items. They should not be removed from the tumble dryer or piled or stacked while hot.
- Items that have previously been cleaned in, washed in, soaked in or spotted with flammable liquids or solids e.g. petrol/gasoline, kerosene, dry cleaning solvents, vegetable or cooking oil, waxes or other flammable or explosive substances should not be placed in a tumble dryer.
- Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, some brands of spot removers, turpentine, waxes and wax removers.
- Fabric Softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity, unless this practice is specifically recommended by the manufacturer of the fabric softener product.
- Rubber backed articles, clothes fitted with foam rubber pads, pillows, fibreglass, shoes containing rubber, plastic items such as shower caps, and babies waterproof napkin covers should not be placed in the dryer.
- Items containing rubber (also known as latex foam) or similarly textured rubber like materials should not be dried on any heat setting. Dry these garments on Airing. Foam rubber material can when heated produce fire by spontaneous combustion.

Sorting and Loading

To get the most efficient use of your dryer we recommend you sort your loads.

Before Drying

- Look for a care label on your clothes. This will tell you if they can be safely tumble dried.
- Close zippers, hooks and eyes, etc to reduce snagging and tangling.

Drying Times

- Drying very small loads is inefficient. Try to dry medium to large loads.
- Sort your clothes into loads that take a similar time to dry e.g. heavier items (towels, T-shirts, flannelette sheets) from light items (synthetics and polycotton sheets and shirts). This will prevent some garments becoming overdried while others are still damp.
- Spin clothes at the highest spin speed suitable for the load type. The more water you remove in the wash, the less time it will need to dry. (NEVER put dripping wet clothes in or on top of the dryer as excessive water could cause an electrical hazard.)

Lint

- Dry lint givers and lint collectors separately.

Lint Givers	Lint Collectors
Towels	Synthetics
Chenille	Corduroy
Nappies	Poly Cotton
	Socks

To Reduce Creasing

- Shake clothes out and load individually to help clothes dry evenly.
- Launder permanent press garments separately e.g. business shirts.
- Allow enough room for clothes to tumble freely when loading.
- Hang garments as soon as the dryer cycle is completed to reduce the need for ironing.

Cleaning the Lint Filter

Electronic and Dualcare Dryers

It is important to clean the lint filter regularly, as the lint produced in the drying process can become a fire hazard if it is allowed to accumulate in or around your dryer.

The lint filter is located in the door opening.

- 1 Remove the lint filter, open it out and wipe clean with your hand.
- 2 Close the lint filter and place it back in the opening.



 
Compact Dryers

The lint filter is located on the door of the dryer behind the directional outlet grill.

- 1 To remove the outlet grill grasp the hub in the centre of the grill and pull. Wipe the filter clean with your hand.
- 2 To replace the grill, locate the hub over the boss in the centre of the door and push firmly.

Note:

Do not clean your lint filter by vacuuming or wetting it, as this may block the fine pores essential for maximum airflow.

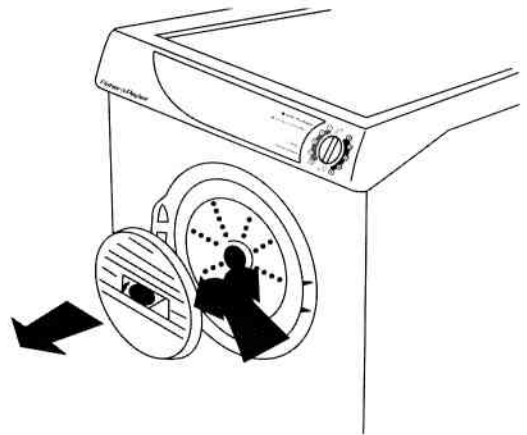


Electronic Dryer

Your Electronic Dryer takes the guess work out of choosing drying times by sensing the dryness of the load. When your dryer senses that the clothes have dried to the dryness level you have selected, the dryer will automatically turn itself off.

Using your Dryer

- 1 Clean the lint filter before every load.
- 2 Load the clothes into the dryer.
- 3 Press **POWER**.
- 4 Select the dryness level.
- 5 Select the temperature setting and other drying options.
- 6 Press **START/PAUSE**.

 The dryer will beep 5 times at the end of the cycle.

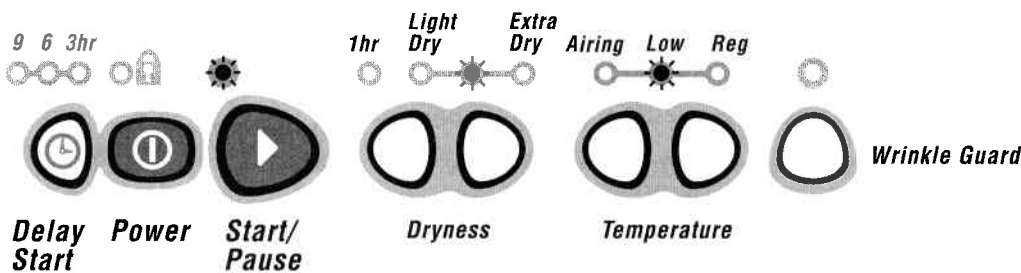

Dryness Levels

The Electronic Dryer has 5 dryness levels from Light Dry through to Extra Dry. Choose the dryness level to suit your load using the guide opposite.

If you find the load is not dry enough, select the next dryness level up. The higher the level, the longer the drying time and the drier your clothes will be.

Two lights are sometimes used to show the dryness level. For example the Light-Medium Dry and Medium-Extra Dry settings.

Light to Medium Settings

Delicate fabrics e.g. synthetics

Fabrics prone to shrinking e.g. sweatshirts

or if you want the clothes slightly damp for ironing

Medium to Extra Dry Settings

Heavier fabrics e.g. towels

Durable fabrics e.g. denim

Airing/Cool Down

When the dryer has sensed that the load is dry it will automatically go into a 10 minute airing or cool down cycle. During airing the drum tumbles and cool air is blown through the clothes. This reduces creasing if the clothes are left in the dryer.

Electronic Dryer

 
1 Hour Setting

The 1 hour setting is a manual cycle which dries continuously for 60 minutes. The manual cycle does not sense when your clothes are dry.

You can use the 1 hour setting when using a drying rack to dry shoes, hats and other items that are best dried without tumbling.

Note:

It is important to check the clothes throughout the manual cycle to avoid overdrying.

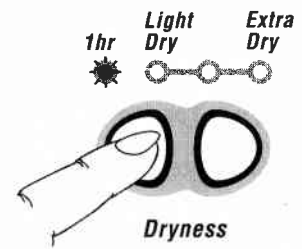


Key Lock

Setting Key Lock prevents the dryer from being accidentally switched off, or the programme being altered when the dryer is running.

- 1 Select drying cycle and press **START/PAUSE**.
- 2 Press **KEY LOCK** (the lock shaped button) and hold for 2 seconds.
- 3 The Key Lock light will flash and the dryer will give 2 quick beeps.
- 4 The Key Lock light will remain on and all other keys will now be locked.

 To remove the key lock repeat steps 2 and 3.

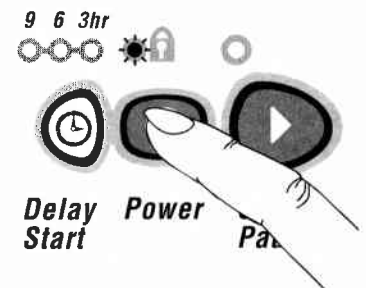

Pausing the Dryer

Opening the door or pressing **START/PAUSE** will stop the dryer tumbling. To start again close the door and press **START/PAUSE**.

Note:

If the door is opened when the dryer is running, and left open for more than 8 minutes, or the door is opened during airing the dryer will automatically switch off.

Drum Reversal

To minimise tangling and to ensure your clothes dry efficiently, the dryer reverses the tumbling every 8 minutes during the cycle.

 
Electronic Dryer

Temperature Settings

This dryer has 3 temperature settings; regular, low and airing.

- The **REGULAR** setting is for drying most fabrics.
- The **LOW** setting is for drying delicates and synthetics. It is half heat so the temperatures are lower for maximum care of the fabrics.
- The **AIRING** setting is a cycle designed to freshen up garments. The airing setting operates only on the 1 hour manual cycle.

The regular and low settings will operate on both the manual and the auto-sensing cycles.

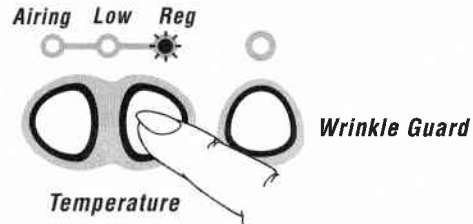

Delay Start

DELAY START will delay the start of the drying cycle by 3, 6 or 9 hours.

 
- 1 Select drying cycle.
- 2 Press **DELAY START** once for a delay of 3 hours. Press again for 6 hours, a third time for 9 hours and again to return to normal.

Selecting **DELAY START** will cancel the 'beeping' at the end of the cycle.

Note:

The **DELAY START** will not operate when the 1 hour manual cycle is selected.

Do not leave non-colourfast materials to sit wet in the dryer as the dye may run.

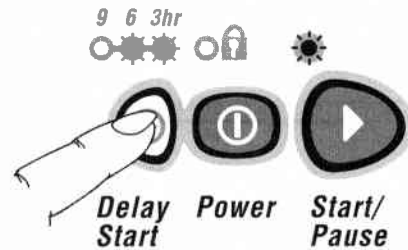


Wrinkle Guard

Use **WRINKLE GUARD** to minimise the creasing that occurs when the clothes are left to sit in the dryer.

At the end of the cycle the drum will rotate briefly every 5 minutes while cool air is blown through the clothes.

WRINKLE GUARD will continue for 12 hours or until the dryer is turned off. The dryer will beep to remind you that the cycle is finished.

 WRINKLE GUARD can be turned on or off at any time during the cycle.

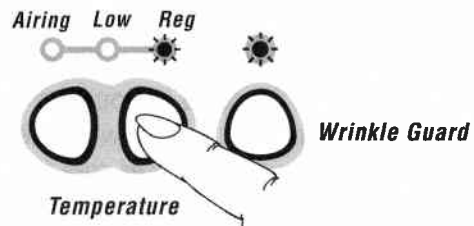

Compact and Dualcare Dryers

The Dualcare and Compact dryers have been designed so you can select how long you want the clothes to dry for. So you know exactly when your clothes will be ready.

Using your Dryer

- 1 Clean the lint filter before every load.
- 2 Load the clothes into the dryer.
- 3 Turning the knob **clockwise only**, select the desired cycle and drying time.
- 4 Try to remove the clothes from the dryer as soon as the cycle is completed to help prevent creasing.

 
Note:

Compact dryers will stop every 5 – 6 minutes, to allow clothes to redistribute.

Drying Cycles

The Dualcare and Compact dryers have two drying cycles designed to take care of all your drying needs.

- The **REGULAR** cycle is for drying more durable fabric or garment types e.g. cotton, denim. Here the heater remains on until the airing phase of the cycle.
- The **DELICATE** cycle is for drying delicates and synthetics. Here the heater pulses on and off, so garments are dried at lower temperatures.

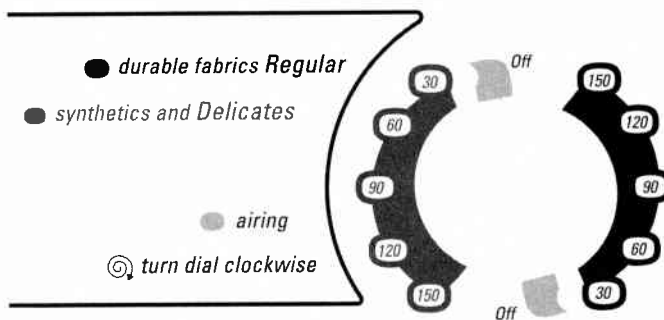

Note:

The Dryers will not dry if the knob is turned anti-clockwise.

Airing/Cool Down

When the Dualcare or Compact dryer has finished drying it will automatically go into a 13 – 15 minute airing or cool down cycle. During airing the drum tumbles and cool air is blown through the clothes. This reduces creasing if the clothes are left in the dryer.

This phase of the drying cycle can be used to air clothes.

Compact and Dualcare Dryers

Drying Times

With your new dryer it may take a few trials before you can accurately predict the correct drying time for each individual load.

As a guide we have included some examples of loads and drying times. These times are approximate only, based on the garments being spun at the maximum spin speed suitable for the wash load.

Load Comparison	Approximate Drying Times
7 Towels	60 – 80 mins
10 Shirts (cotton/polyester)	20 – 40 mins
4 T-shirts plus 5 Towels	60 – 80 mins
9 Small Delicates	20 – 30 mins

Drying Rack

Electronic and Dualcare Dryers Only

A drying rack is available to dry shoes, hats and other items that are best dried without tumbling.

How to use the Drying Rack

- 1 Place the locating pin at the end of the drying rack into the hole in the centre of the rear of the dryer drum.
- 2 Adjust the rack so that it is flat.
- 3 For the **Electronic Dryer** we recommend using the 1 hour manual cycle, and the low temperature setting (fully featured models).

For the **Dualcare Dryer** we recommend using the Delicate cycle.

It is important to check the articles throughout the cycle to avoid overdrying.

The dryer rack is an optional extra. (Part No. 427228). In New Zealand, contact your Fisher & Paykel Dealer. In Australia, contact Fisher & Paykel on 1300 650 590.

Operating Problems

If your dryer is not operating properly use the checklist below to find the possible solution.

Pressing POWER or setting the timer does not turn the machine on.

Is the electrical cord plugged in?

Is the power switched on at the wall?

Is the door securely closed?

Could your household power supply be at fault. Try plugging in another electrical appliance.

Make sure the timer is not in the **OFF** position.

Clothes are still damp.

If you have turned the knob anti-clockwise on the Timer Dryers the dryer will not dry.

Try selecting a higher dryness level.

Very small loads in the Electronic Dryer may under-dry. Increase the load size.

Pressing START/PAUSE does not start the Electronic Dryer.

Try pressing **START/PAUSE** again.

Has the **KEY LOCK** been set?

Dryer is taking a long time to dry.

Is the lint filter clean?

Is the airflow system free from obstruction?

The dryer keeps stopping and starting.

Has **WRINKLE GUARD** been turned on?

The dryer is beeping and the pattern of lights is unfamiliar.

Turn the dryer off at the wall. Wait 15 seconds and turn it back on. Press **POWER** and restart.

If the problem persists contact your Dealer or Authorised Service Centre.

Manufacturer's Warranty

When you purchase any new Fisher & Paykel whiteware product you automatically receive a 2 year Manufacturer's Warranty covering parts and labour for servicing.

Fisher & Paykel Undertakes to:

Repair or, at its option, replace without cost to the owner either for material or labour, any part of the Product, the serial number of which appears on the Product, which is found to be defective within TWO YEARS of the date of purchase.

This Warranty DOES NOT Cover

- A** Service calls which are not related to any defect in the Product. The cost of a service call will be charged if the problem is not found to be a Product fault. For example:
 1. Poor drying performance due to incorrect installation e.g. no venting system fitted, dryer vent against a wall, blocked lint filter.
 2. Poor drying performance due to incorrect loading e.g. overloading or underloading.
 3. Damage from articles in the drum e.g. bra wires, pens, crayons or dye transfer.
 4. Timer dryer not heating due to timer knob being turned anticlockwise.
- B** Defects caused by factors other than:
 1. Normal domestic use or
 2. Use in accordance with the Product's User Guide.
- C** Defects to the Product caused by accident, neglect, misuse or Act of God.
- D** Correction of unauthorised repairs.
- E** Normal recommended maintenance as set out in the Product's User Guide.

Service under this Manufacturer's Warranty must be provided by an Authorised Service Agent (refer to the Customer Care section for contact details). Such service shall be provided during normal business hours. This warranty certificate should be shown when making any claim.

Note:

This Warranty is an extra benefit and does not affect your legal rights and applies only to product purchased in New Zealand and Australia.

Please keep this User Guide in a safe place.

Do not return to Fisher & Paykel.

Customer Care



Check the things you can do yourself. Refer to your User Guide and check:

- 1 your appliance is correctly installed
- 2 you are familiar with its normal operation
- 3 you have read the Trouble Shooting section

If after checking these points you still need assistance please refer to the following:

In New Zealand If You Need Assistance...*

Call your Fisher & Paykel retailer who is trained to provide information on your appliance, or if we can be of any further help, please contact our Customer Care Centre,

Toll Free: 0800 FP CARE or 0800 37 2273 **Fax:** (09) 273 0656

Email: customer.care@fp.co.nz

Postal address: P.O.Box 58732, Greenmount, Auckland

If you need service...*

Fisher & Paykel has a network of independent Fisher & Paykel Authorised Service Centres whose fully trained technicians can carry out any service necessary on your appliance. Your dealer or our Customer Care Centre can recommend an Authorised Service Centre in your area.

In Australia If You Need Assistance...*

Call the Fisher & Paykel Customer Care Centre and talk to one of our Customer Care Consultants.

Toll Free: 1300 650 590

Fax: (07) 3826 9298

Email: customer.care@fp.com.au

Postal address: PO Box 798, Cleveland, QLD 4163

If you need service...*

Fisher & Paykel Australia Pty Ltd has a network of independent Fisher & Paykel Authorised Service Centres whose fully trained technicians can carry out any service necessary on your appliance. Our Customer Care Centre can recommend an Authorised Service Centre in your area.

*If you call or write, please provide: name, address, model number, serial number, date of purchase and a description of the problem. This information is needed in order to better respond to your request for assistance.

Product details can be found on a sticker situated on the back of the dryer cabinet, or on the inside of the dryer door.

Product Details

Fisher & Paykel Appliances Ltd

Model/Serial No.

Date of Purchase _____

Purchaser _____

Dealer _____

Suburb _____

Town _____

Country _____